

# TITAN PDU Portable Dispensing Unit




## STEP 1

Remove cap on fill spout.



## STEP 2

Fill PDU with DEF through the fill spout. Only DEF approved nozzles will fit through the opening. This eliminates the chance of contaminating the tank with other products.

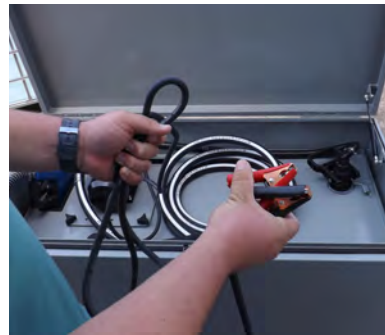

## STEP 3

Connect system to the 12 volt power source.



## STEP 4


Remove the nozzle from its holder and turn system to the "on" position. You are now ready to dispense your DEF.

# How to Refill PDU from Tote



## STEP 1

Disconnect Titan coupler by pulling handle latch. Coupler handle will disengage. Turn coupler counter-clockwise to remove.

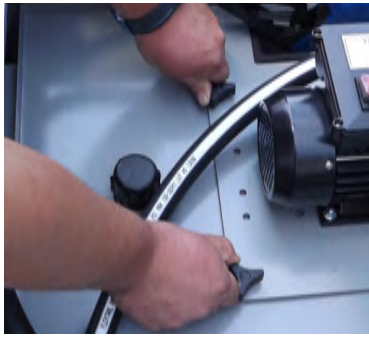

## STEP 2

Remove thumb screws.



## STEP 3

Push bracket towards back of the PDU. Lift the front of the bracket to remove the pump.



## STEP 4

Remove the pump and hoses from the PDU. Hang the pump on the side of the tote as shown.



## STEP 5

Insert the Titan coupler into the valve. Turn clockwise to positive stop and depress handle until an audible "click" is heard.



## STEP 6

Connect pump to power source.



## STEP 7

Turn on the pump.



## STEP 8

Fill PDU through the fill port. When full, turn off the pump and re-install the pump system into the PDU.